HOOVER

DRYER

31100140 HNC175-80

Service Manual

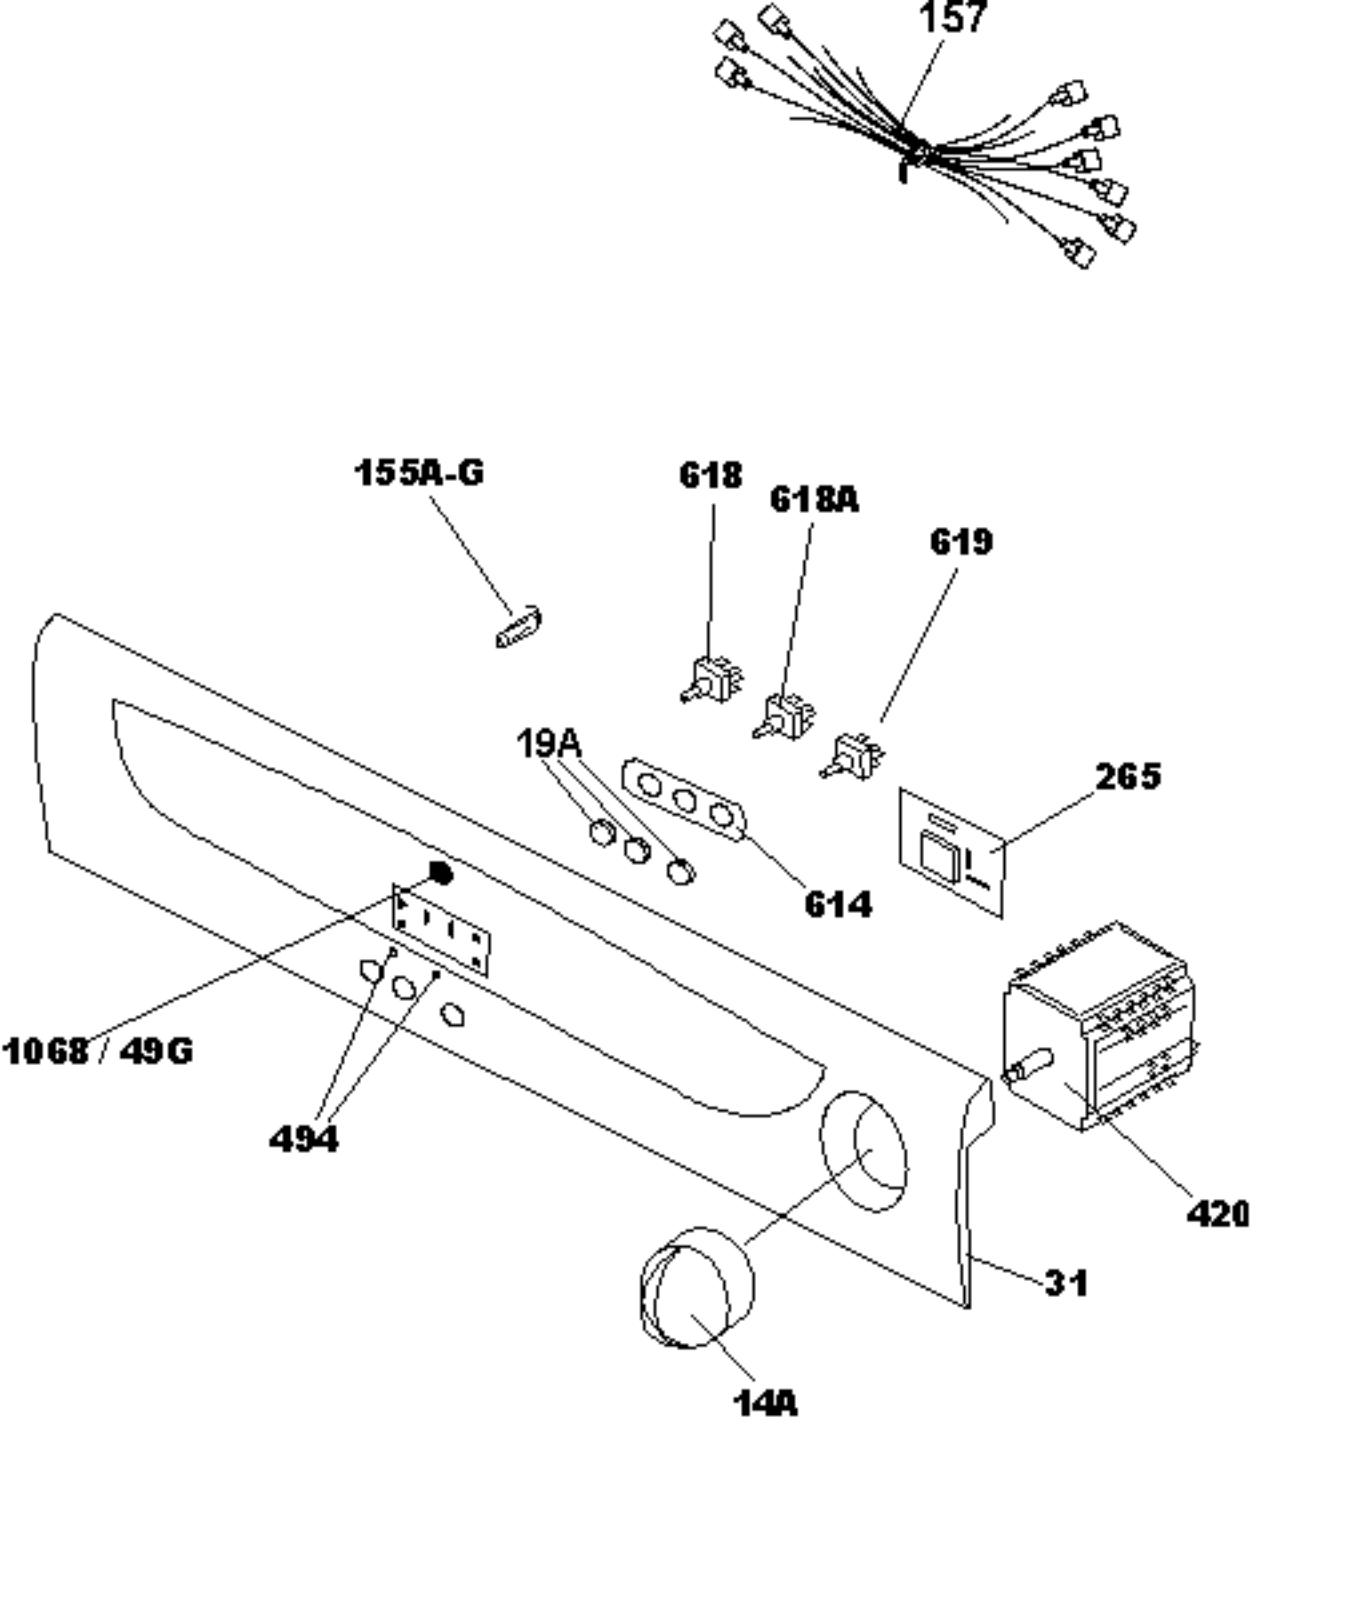
157
155A-G
618
618A
619
19A
265
614
1068 / 49G
494
420
31
14A

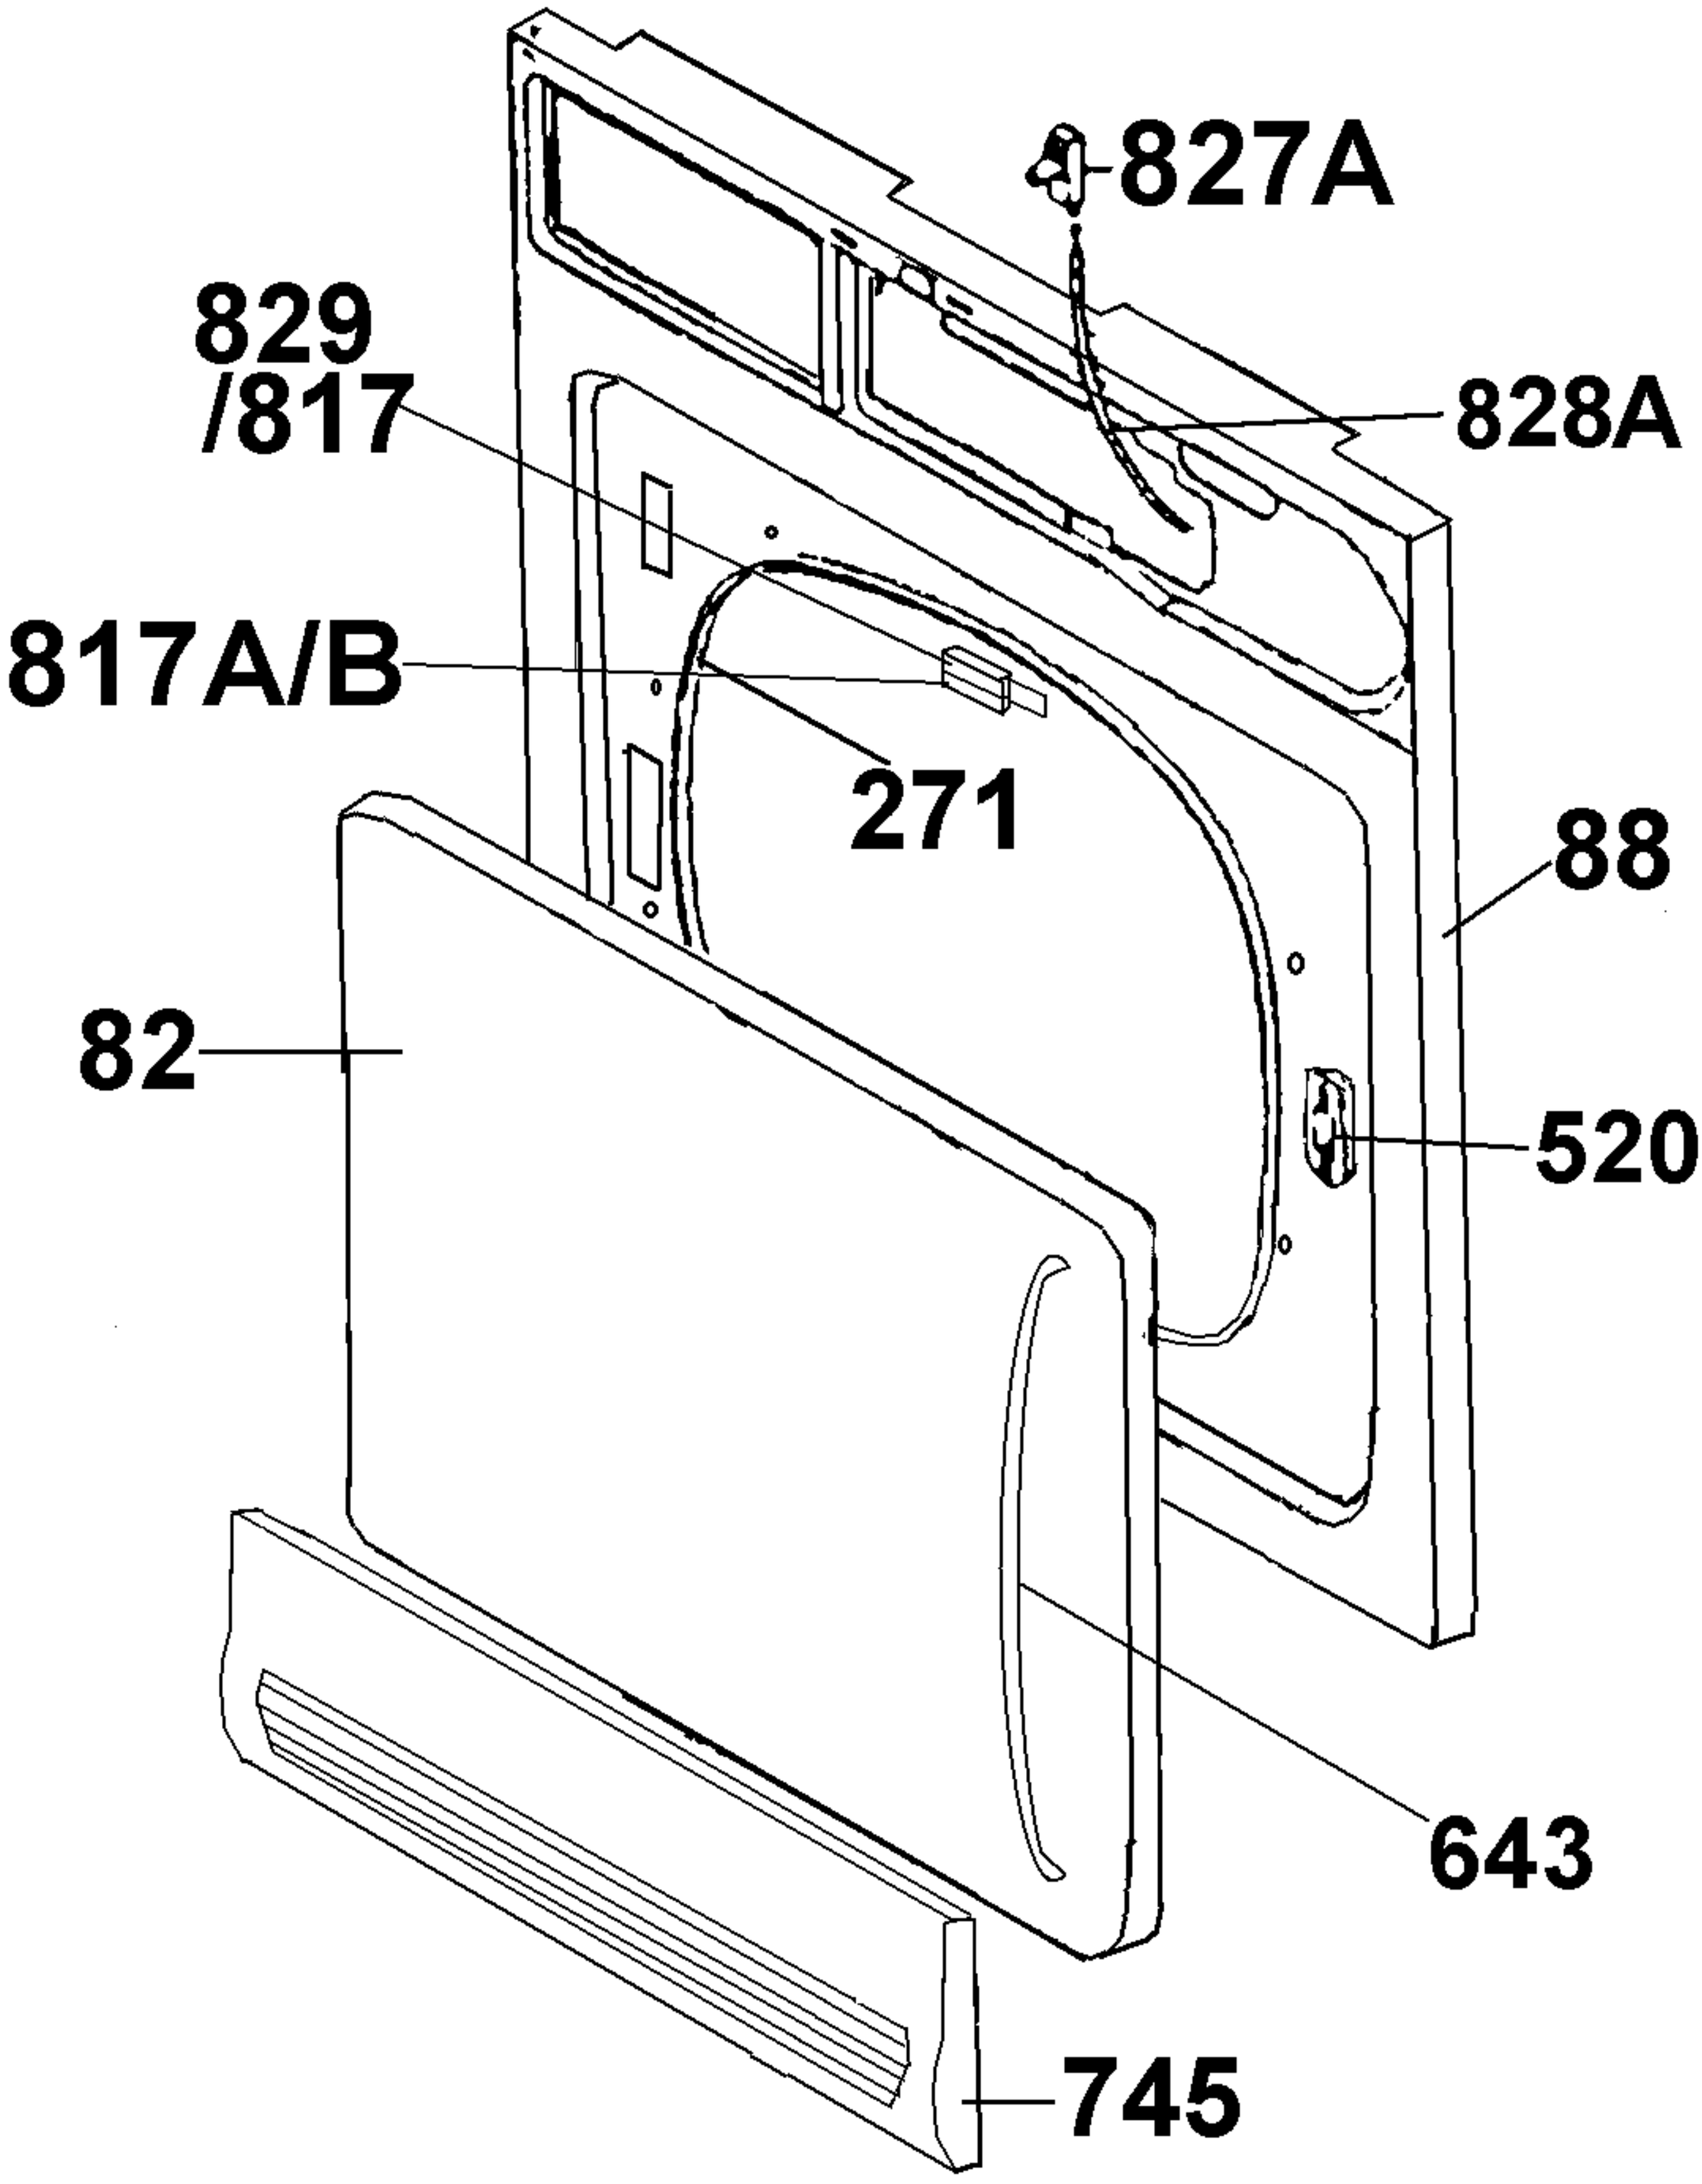
827A
829
/817
828A
817A/B
271
88
82
520
643
745

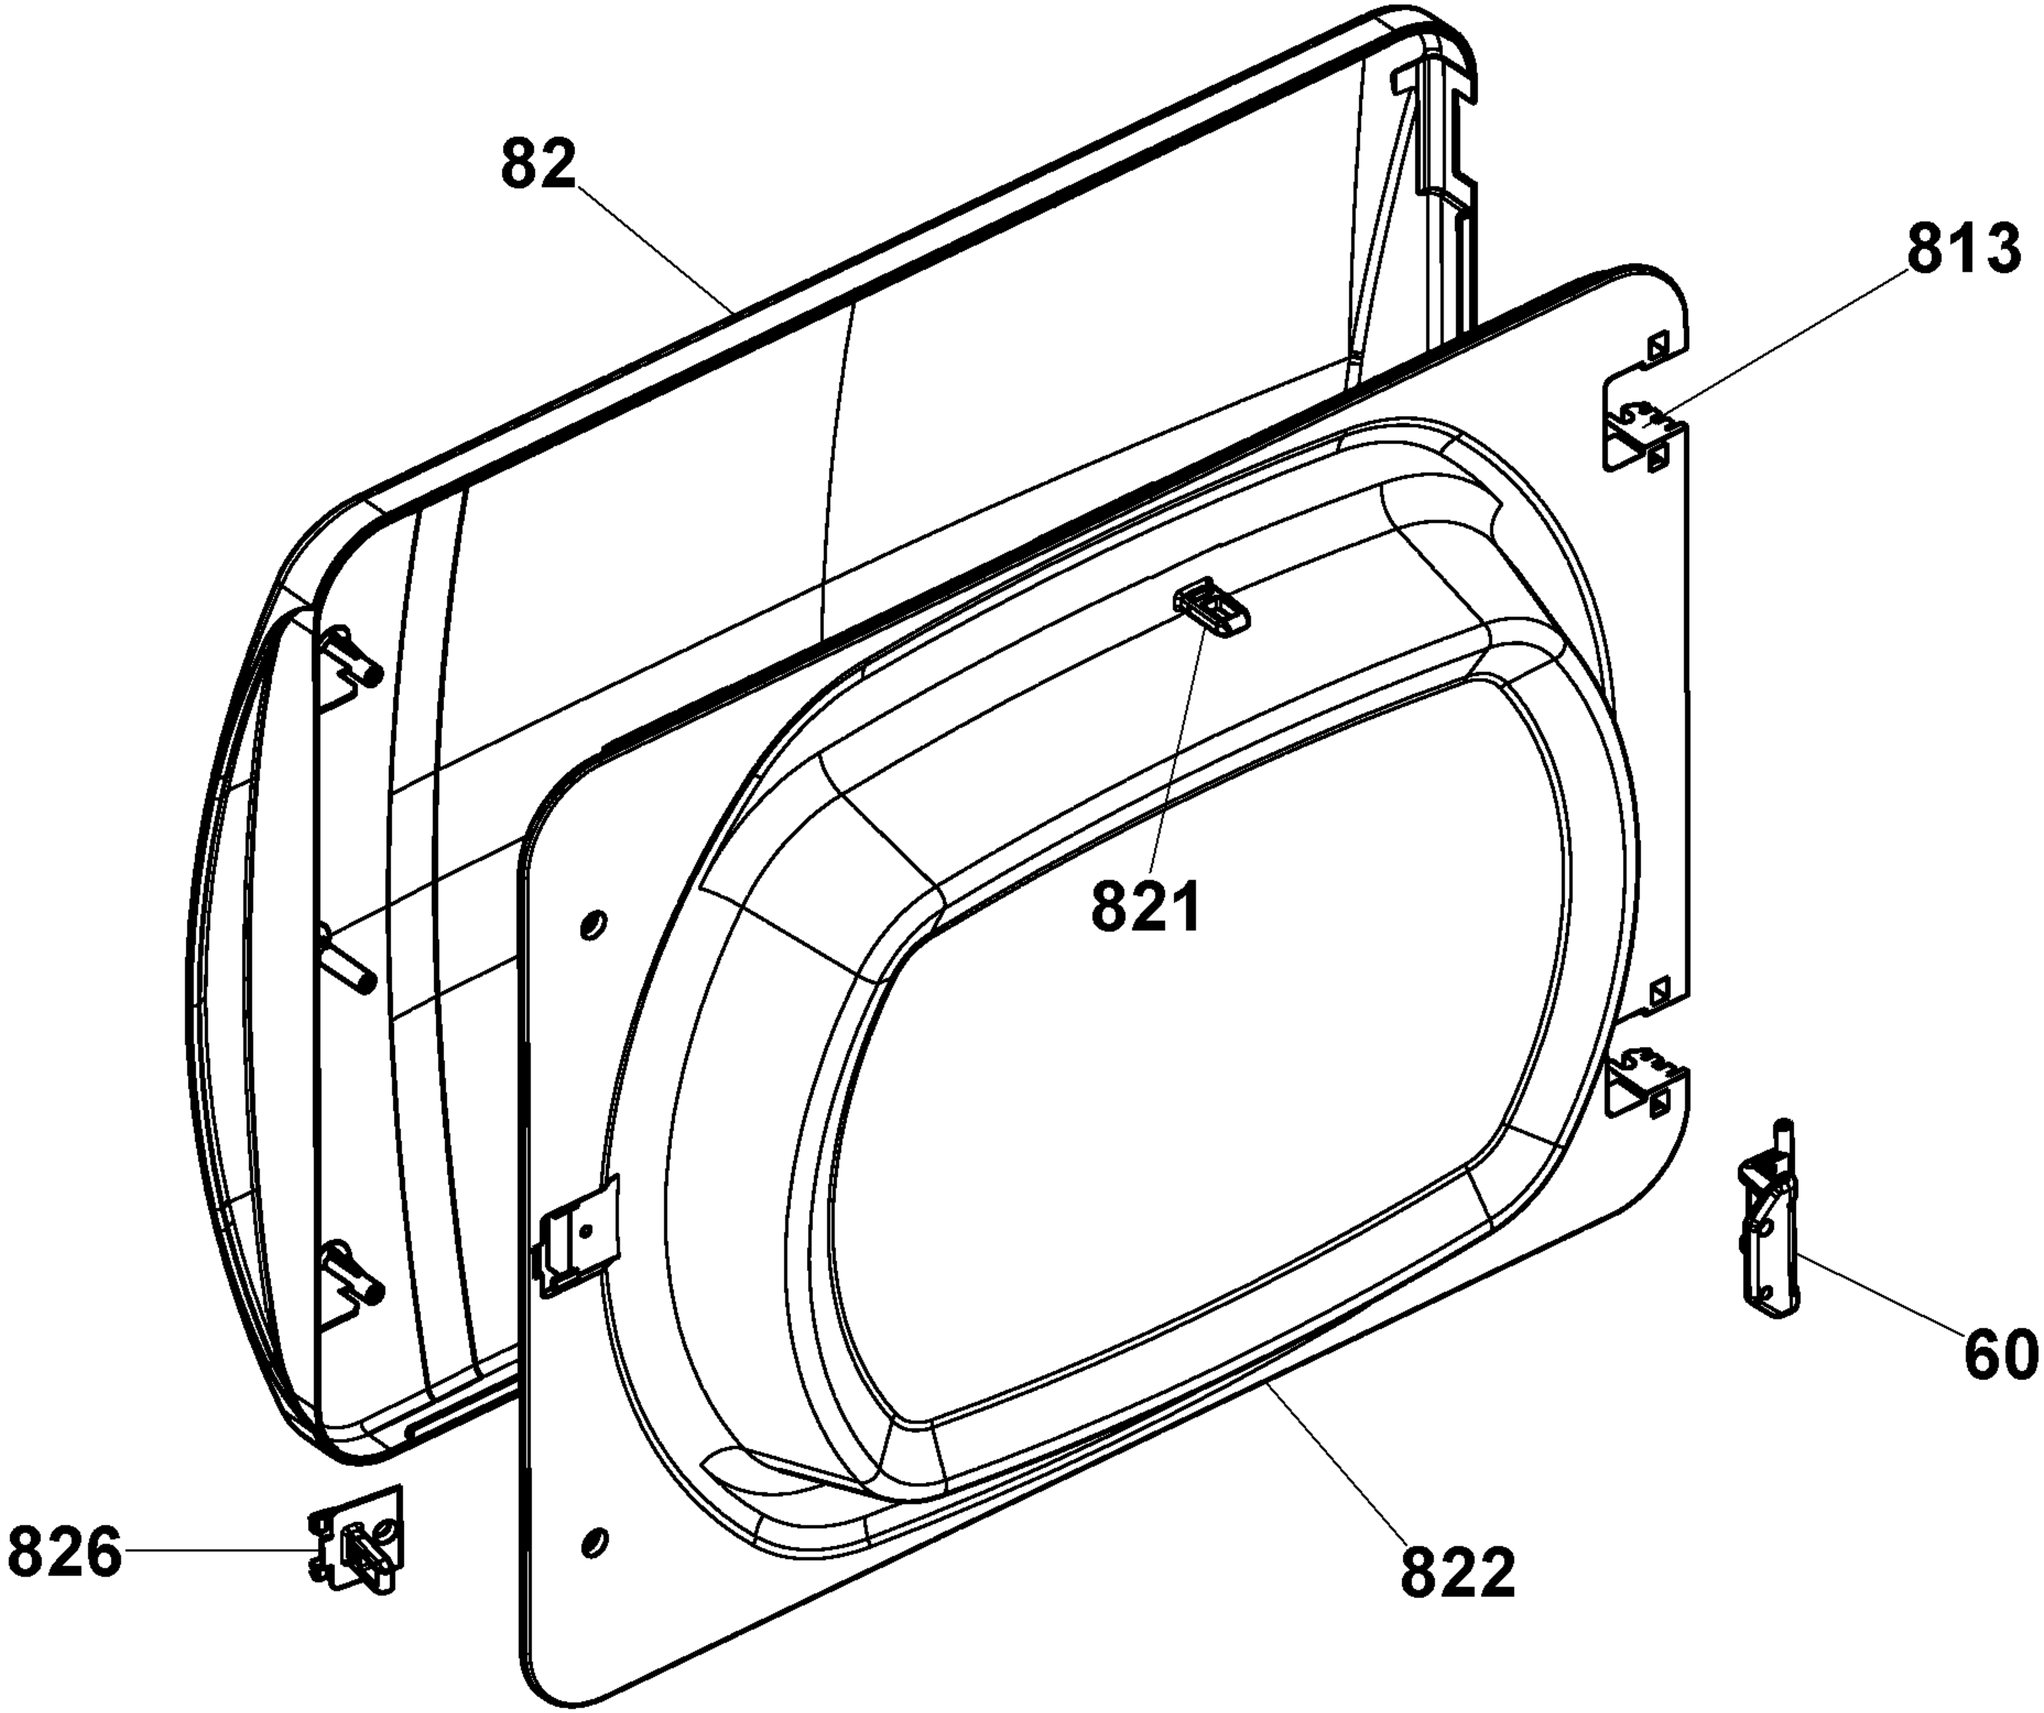
82
813
821
826
822
60

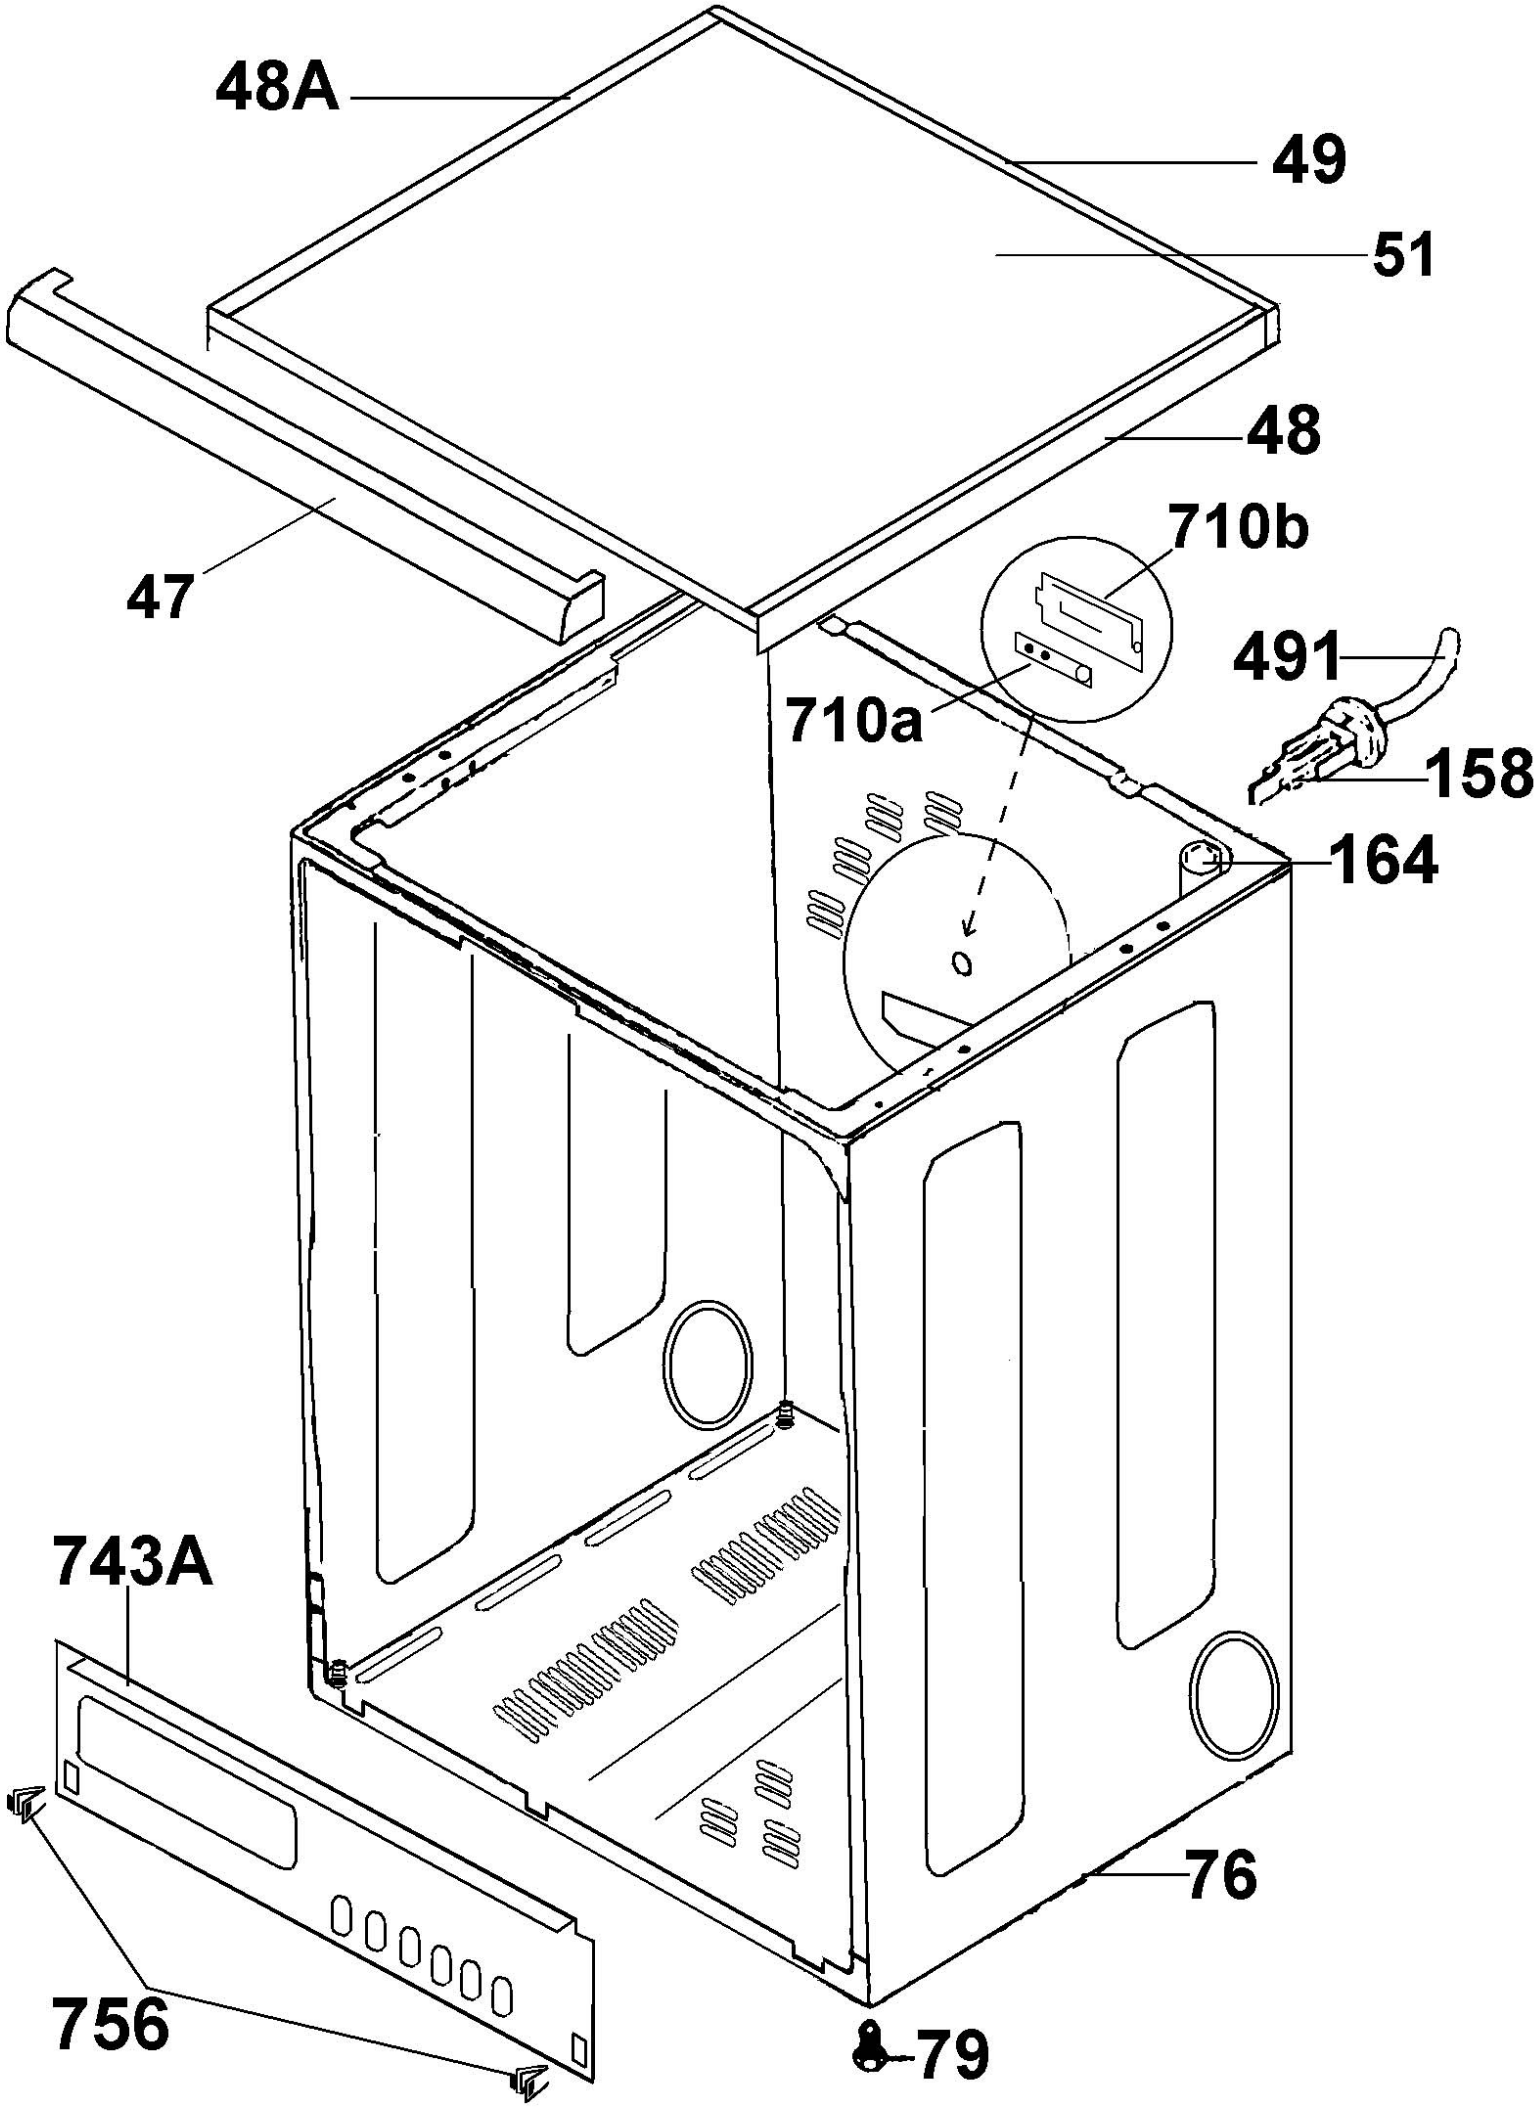
48A
49
51
48
47
710b
491
710a
158
164
743A
76
756
79

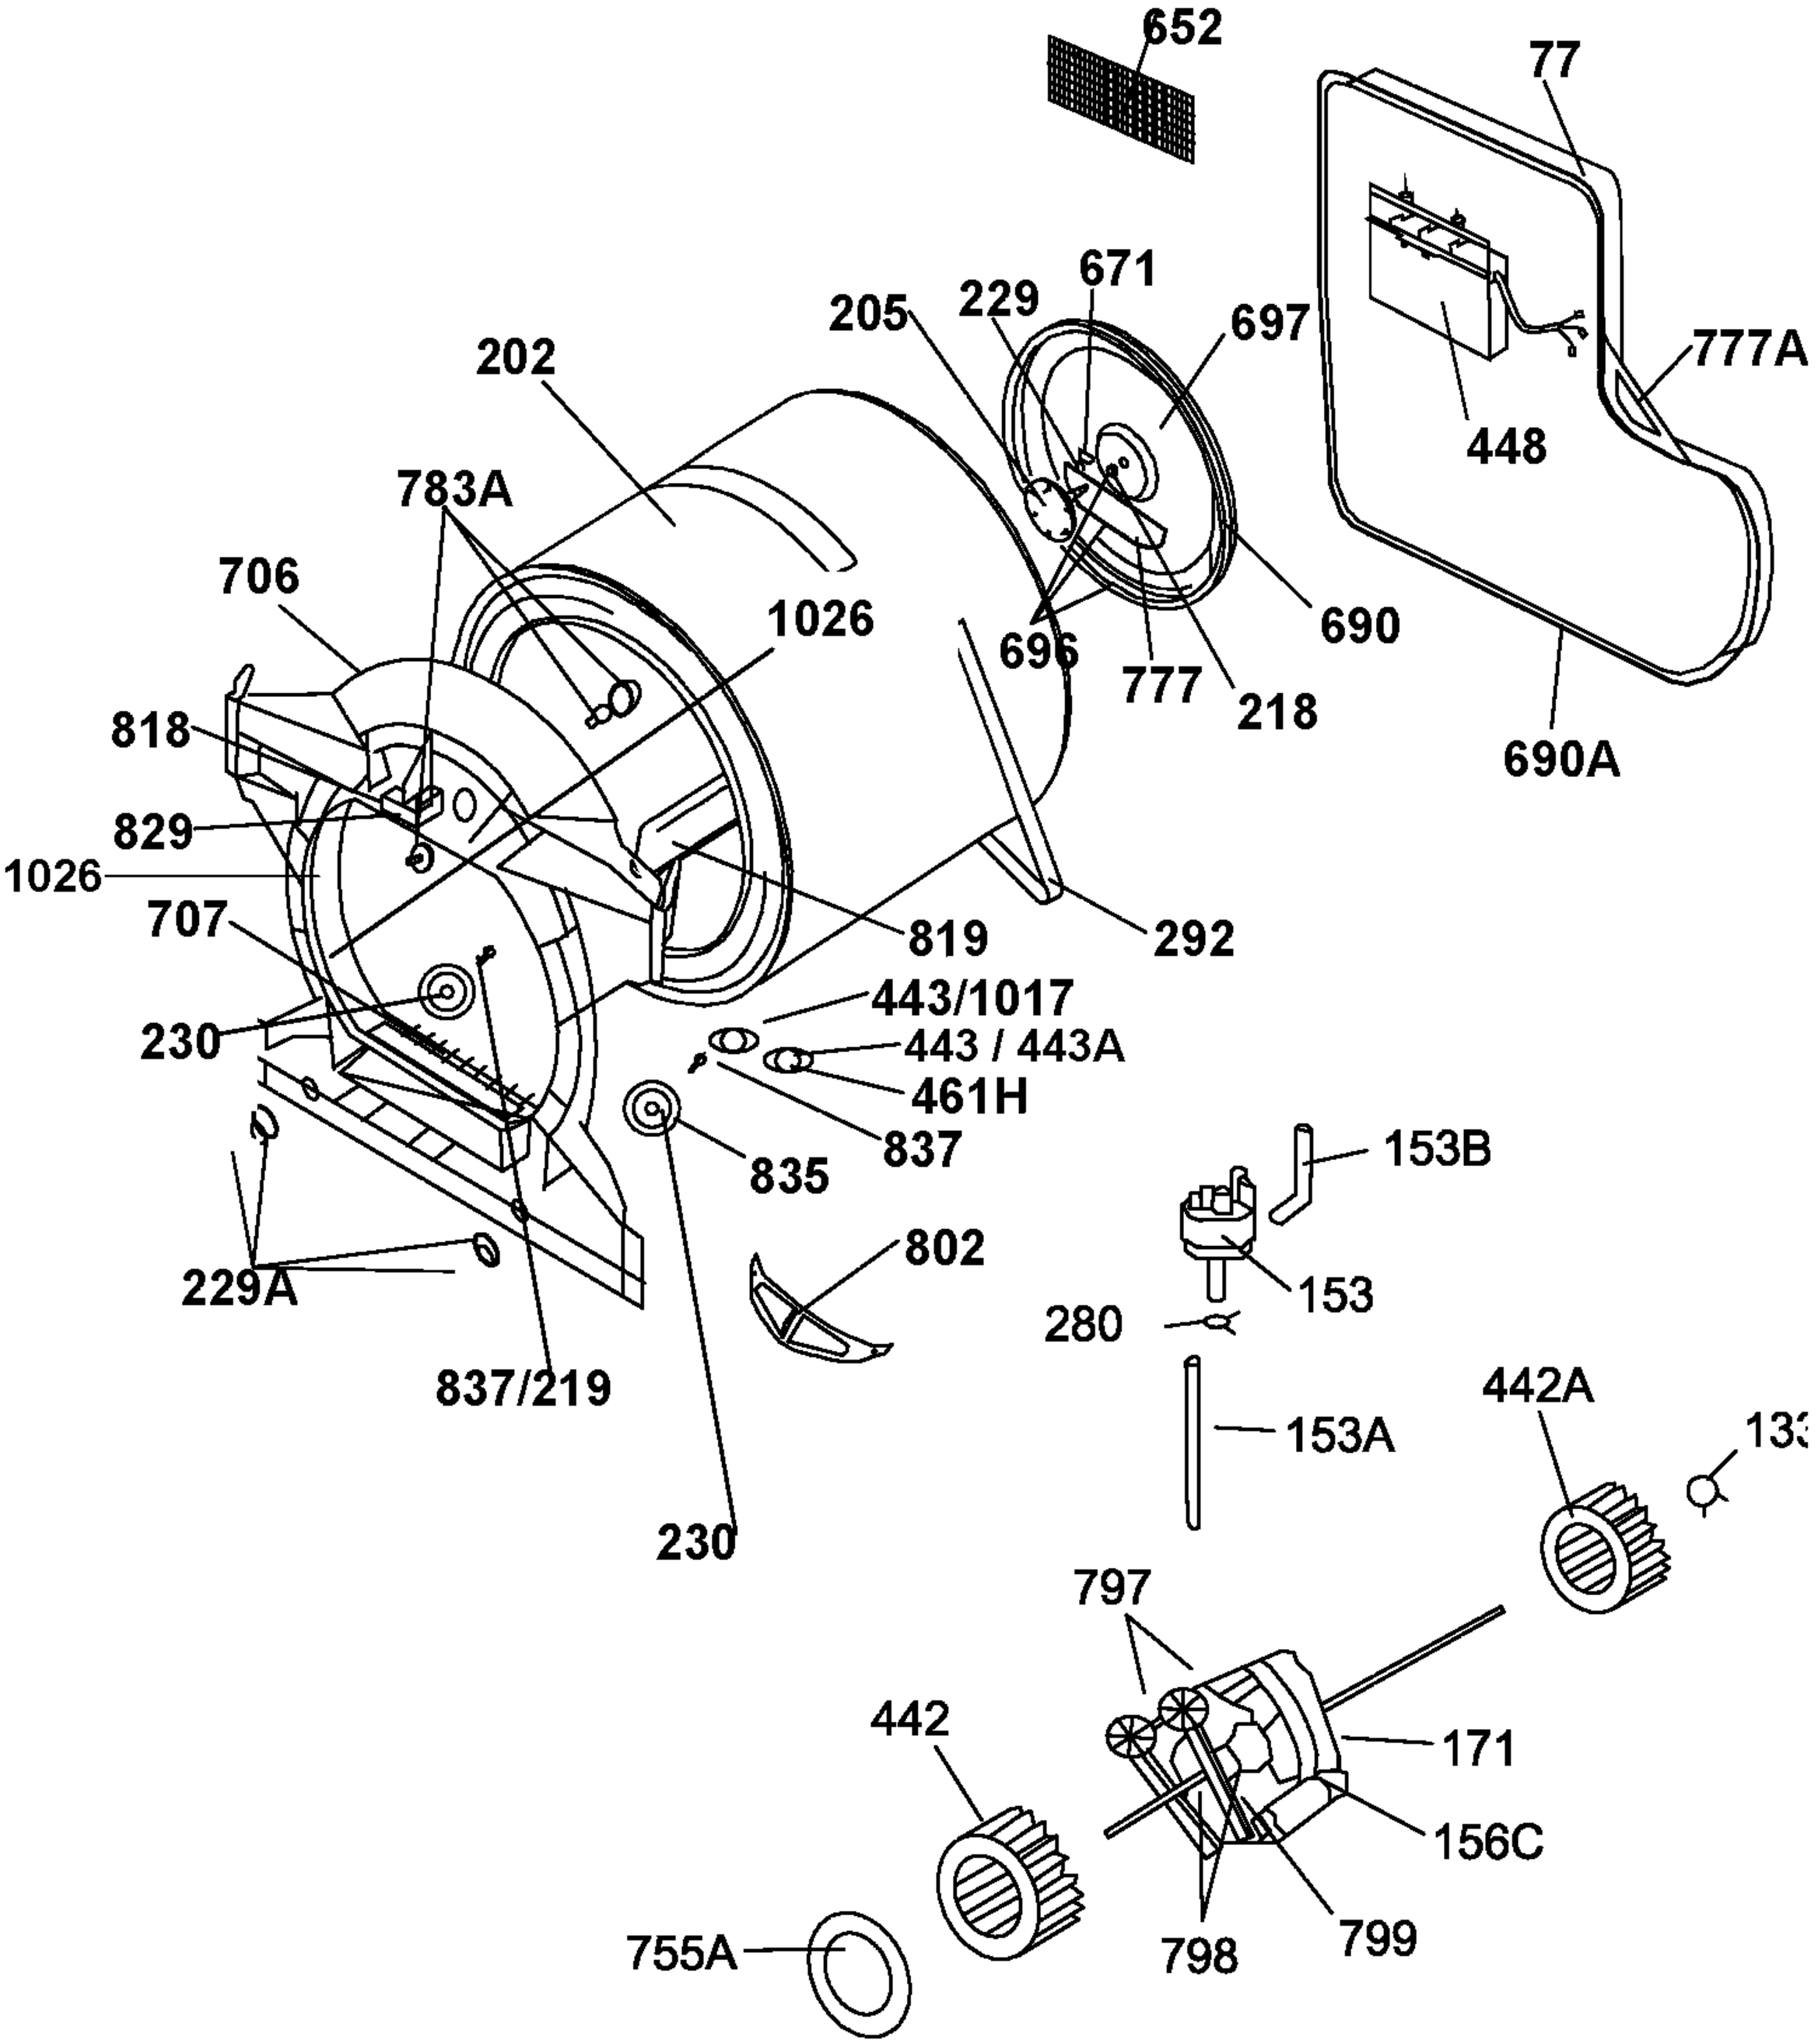

DRUM ASSY - CONDENSER

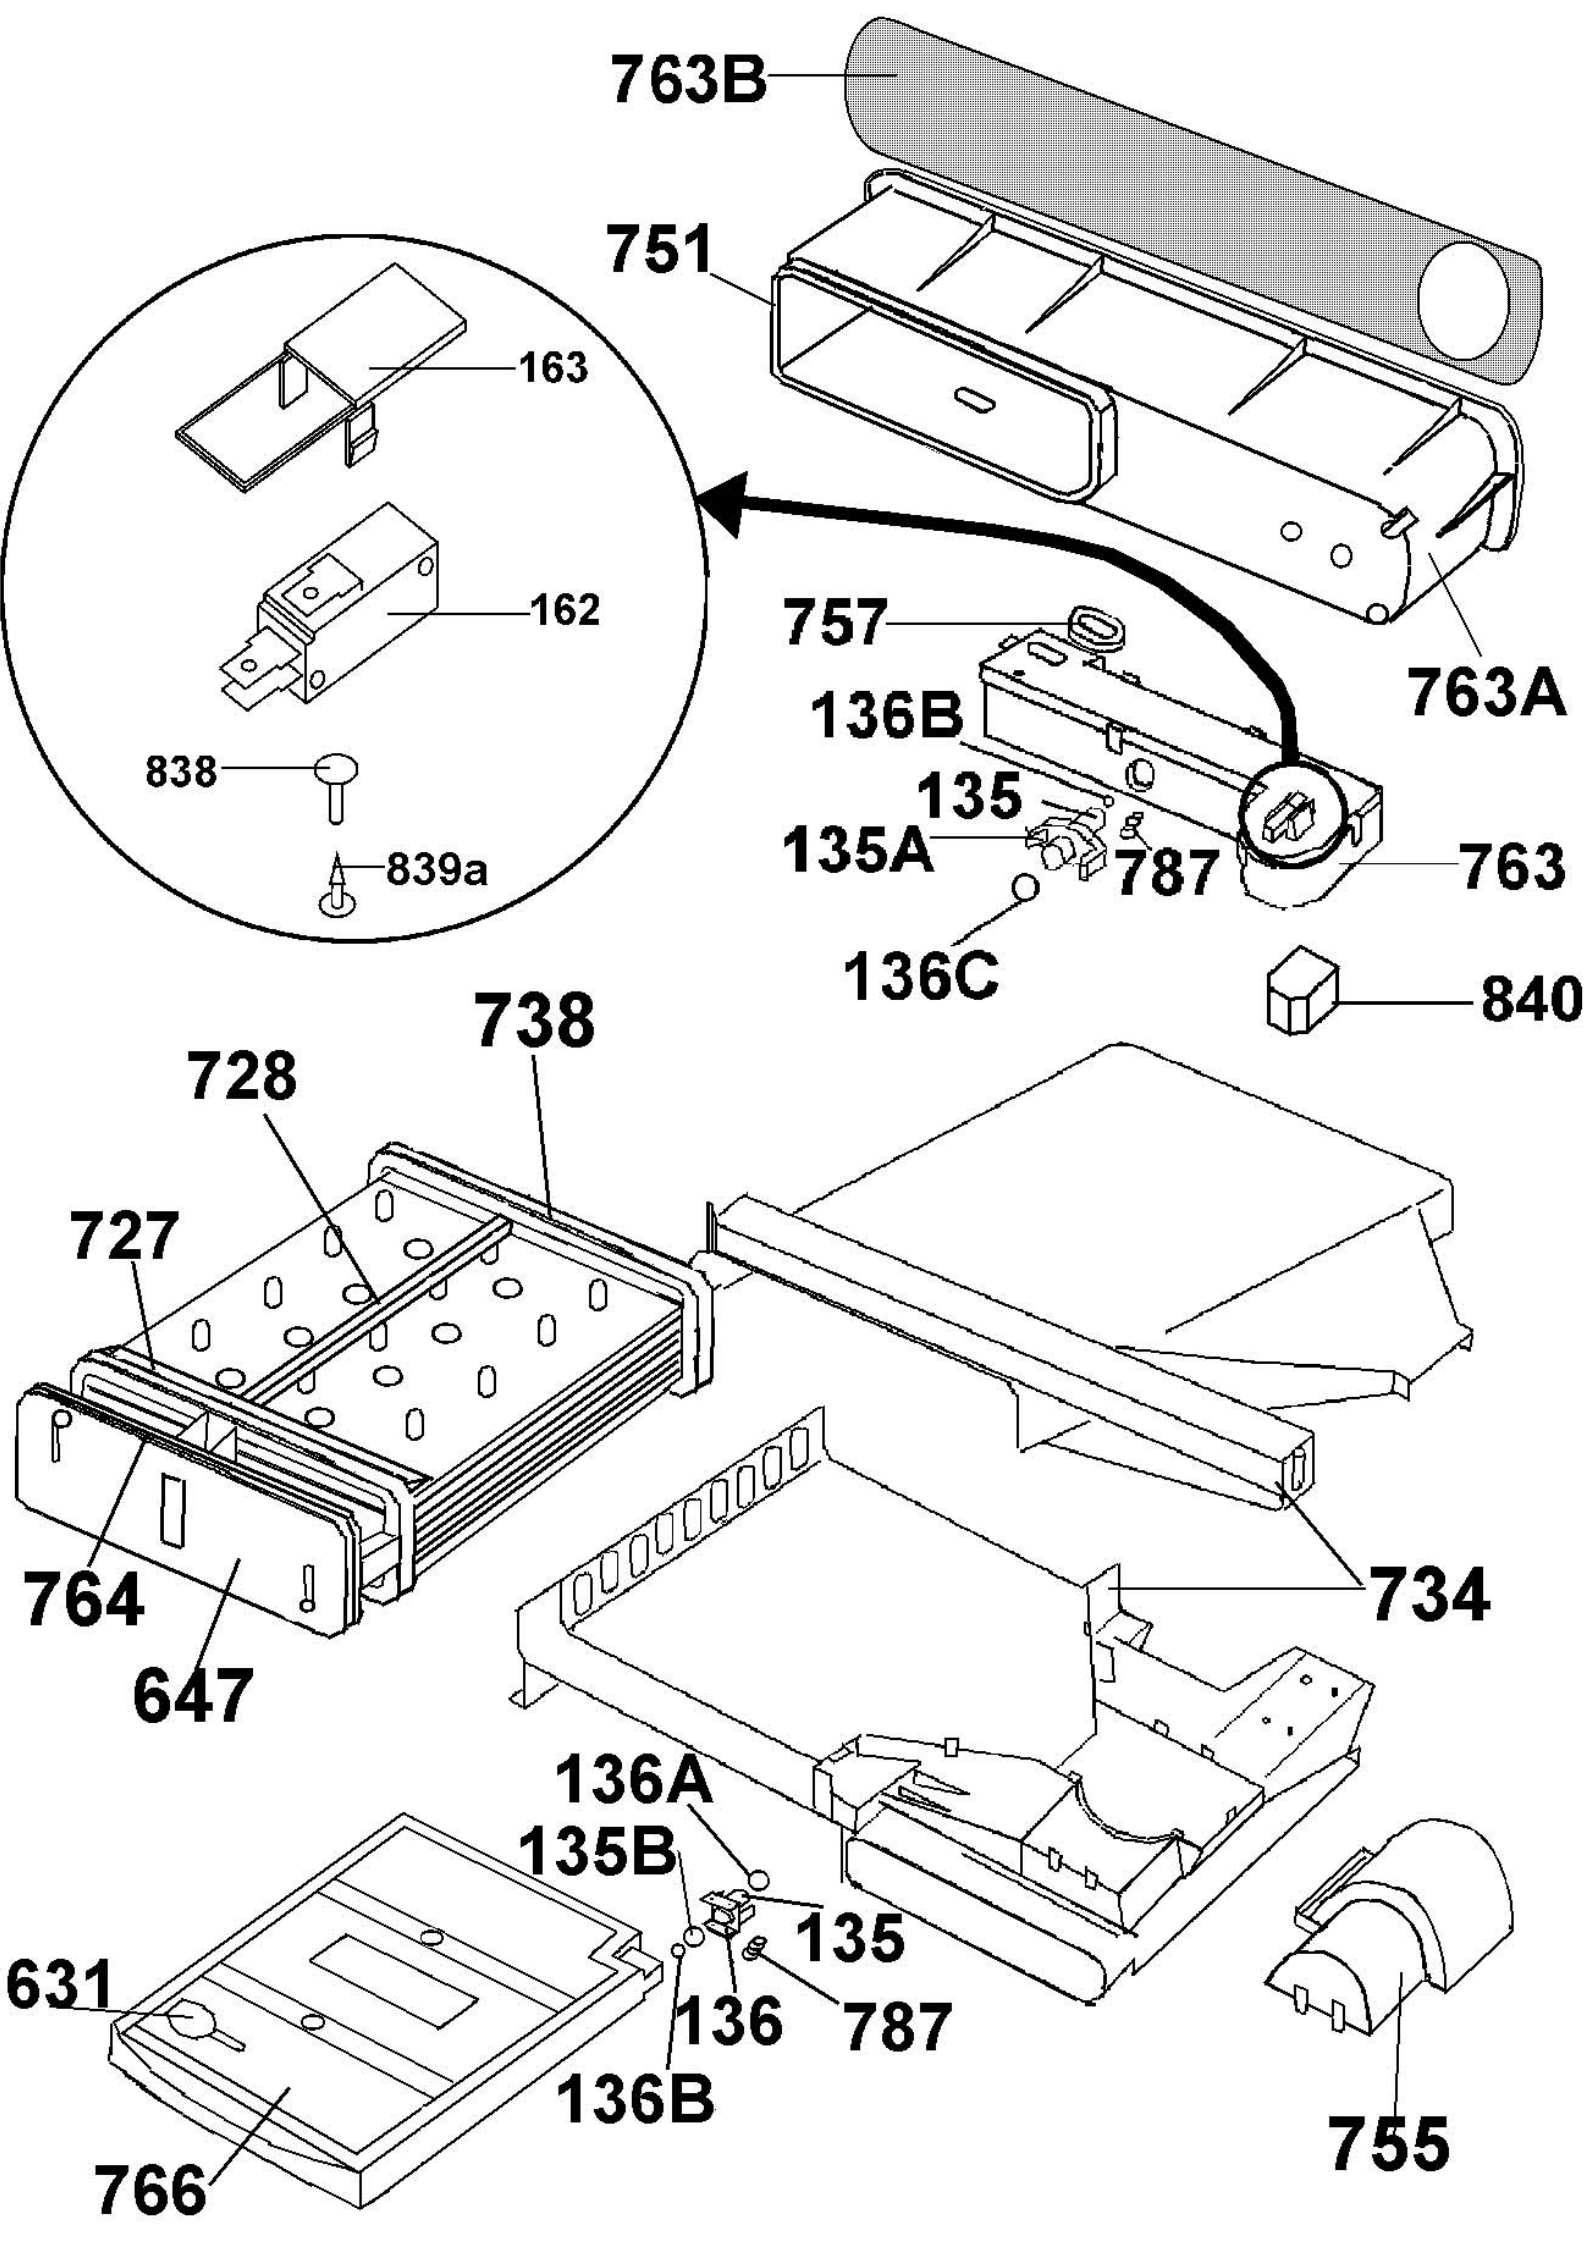
763B
751
163
162
838
839a
757
136B
135
135A
787
763
763A
136C
840
738
728
727
764
647
734
136A
135B
135
631
136
787
136B
766
755

31100140 HNC175-80 0528 (06/07/2005)

Ref.	Descrizione - Description - Beschreibung - Descripcion	Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
14a	Drying knob	40001287		
19a	Button on/off	40001290		
31	Control panel	40003456		
48	R/H side frame	40001549		
48a	L/H side frame	40001550		
49	Top rear frame	40001551		
49g	Trade mark plate	91617795		
51	Work top	40001548		
60	Hinge	40001064		
76	Cabinet-assy	40002046		
77	Rear panel	97921738		
79	Rear foot	90387150		
82	Door panel	40001285		
88	Front panel	40001060		0626 (30/06/2006)
88	Front panel	40004099	0626 (30/06/2006)	
133	Hose clip	92470012		
135	Water valve	03860531		
135a	Valve body	03860530		
135b	Foam ring	03620295		
136	Water container valve	03860523		
136a	OR (O-Ring)	25156026		
136b	O-Ring small	25156027		
136c	O-Ring large	25156025		
155	Indicator liht	91209510		
156c	Capacitor 8 MF	09069857		
157	Harness	04660440		
158	Main block	91623678		
162	Microswitch	28353502		
163	Microswitch holder	03870737		
164	Anti jamming filter radio	91200489		
171	Main motor	09200471		

Copyright 2011 Gias S.r.L.

31100140 HNC175-80 0528 (06/07/2005)

Ref.	Descrizione - Description - Beschreibung - Descripcion	Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
202	Drum	40002637		
205	Drum shaft assy	09200336		
218	Bearing	03210179		
229	Circlip	97911424		
229a	Circlip/washer kit for wheels	09200457		
265	Relay	91201247		
271	Door gasket	40001055		
292	Drive belt	40001012		
420	Time lag device	97923304		
442	Fan	03870702		
442a	Rear fan	40001069		
443	Thermostat	40001954		
448	Heather	04820073		
491	Main cable	04650092		
494	Red window	40001365		
520	Door coupler	09200399		0626 (30/06/2006)
520	Door coupler	40004092	0626 (30/06/2006)	
614	Therm.press.push but.supp	03870759		
618	Unipolar NC switch	41006060		
619	Bipolar switch NA	41012643		
631	Stopper	03730696		
647	Water condenser	04350217		
671	Washer	03610428		
690	Rear sealing felt	03870676		
690a	Rear cover seal	97921746		
696	Heater support	04150078		
697	Heater support disk	03730875		
706	Front ring assembly	09200434		
707	Filter for carter	40003166		
710a	Earth tag	09200337		
710b	Drum shaft earth tag cover	09200346		

Copyright 2011 Gias S.r.L.

31100140 HNC175-80 0528 (06/07/2005)

Ref.	Descrizione - Description - Beschreibung - Descripcion	Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
727	Gasket	03870632		
728	Gasket	03870670		
734	Container	03870673		
738	Gasket	03870631		
743a	Cover frame	03790612		
745	Capacitor grill	04230636		
751	Gasket	03870699		
755	Cover	03870663		
755a	Fan insert	03860521		
756	Spring	97917736		
763	Air trap	04360392		
763a	Water rear duct	03860520		
763b	Water rear duct gasket	03870714		
764	Gasket	03870739		
766	Water container assy	04360359		
777	Heater gasket	03870713		
777a	Heater cable seal	03870777		
786	Stirrup support shaft	03640424		
787	Spring	03831180		
797	Beltightening pulley	40001027		
798	Beltightening lever	90386979		
799	Belt tighteningb spring	90387051		
804	Hinge fixing upper bracke	03640445		
813	Cabinet stopper	03410166		
817	Microswitch	28353089		0626 (30/06/2006)
818	Microsw.support bracket	03450072		0626 (30/06/2006)
819	Drum scowel	03870618		
821	Door pin	03841430		0626 (30/06/2006)
822	Immerdoor assy	40001284		0626 (30/06/2006)
822	Immerdoor assy	40004098	0626 (30/06/2006)	
826	Door hook	40001357		0626 (30/06/2006)

Copyright 2011 Gias S.r.L.

31100140 HNC175-80 0528 (06/07/2005)

Ref.	Descrizione - Description - Beschreibung - Descripcion	Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
826	Door hook	40004091	0626 (30/06/2006)	
834	Bush	03210171		
835	Drum support wheels	03850295		
836	Nut for wheels	92424183		
837	Bolt for wheels	40001058		
838	Microswitch activator button	03870779		
839a	Foot	21393002		
840	Float assy	03870778		

Copyright 2011 Gias S.r.L.

31100140 HNC175-80 0528 (06/07/2005) - Modifications History -

Ref.	Descrizione - Description - Beschreibung - Descripcion	Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
	NEW DRYERS INTERLOCK			
88	Front panel	40001060		0626 (30/06/2006)
88	Front panel	40004099	0626 (30/06/2006)	
520	Door coupler	09200399		0626 (30/06/2006)
520	Door coupler	40004092	0626 (30/06/2006)	
822	Immerdoor assy	40001284		0626 (30/06/2006)
822	Immerdoor assy	40004098	0626 (30/06/2006)	
826	Door hook	40001357		0626 (30/06/2006)
826	Door hook	40004091	0626 (30/06/2006)	
821	Door pin	03841430		0626 (30/06/2006)
818	Microsw.support bracket	03450072		0626 (30/06/2006)
817	Microswitch	28353089		0626 (30/06/2006)

Copyright 2011 Gias S.r.L.

CROUZET WIRING DIAGRAM

L
BROWN
WHITE
START SW
BLUE
GREEN
1
2
BLUE
(COM)
(COM)
14
B
NEON
ON/OFF
NO
GREEN
PCB/RELAY
WHITE
DOOR
MICRO SW
BLUE
(N)
11
A
N
BLUE
1
3
I
(L)
BLACK INS
WHITE
RED
THERMOSTAT
RED
HALF HEAT
HEATER
RED
WHITE
BLACK
YELLOW
THERMOSTAT/TOC
BLOCKED FILTER NEON
2B
4B
TIMER
2T
6T
WHITE
BLUE
BLUE
BROWN
M
A
A
OR
OR
M
2
4
6
BLU
M
BROWN
MOTOR
RED
YELLOW
BROWN
2
YELLOW
1
3
MICRO SWITCH
L/BLUE
CASSETTE FULL
NEON
L/BLUE

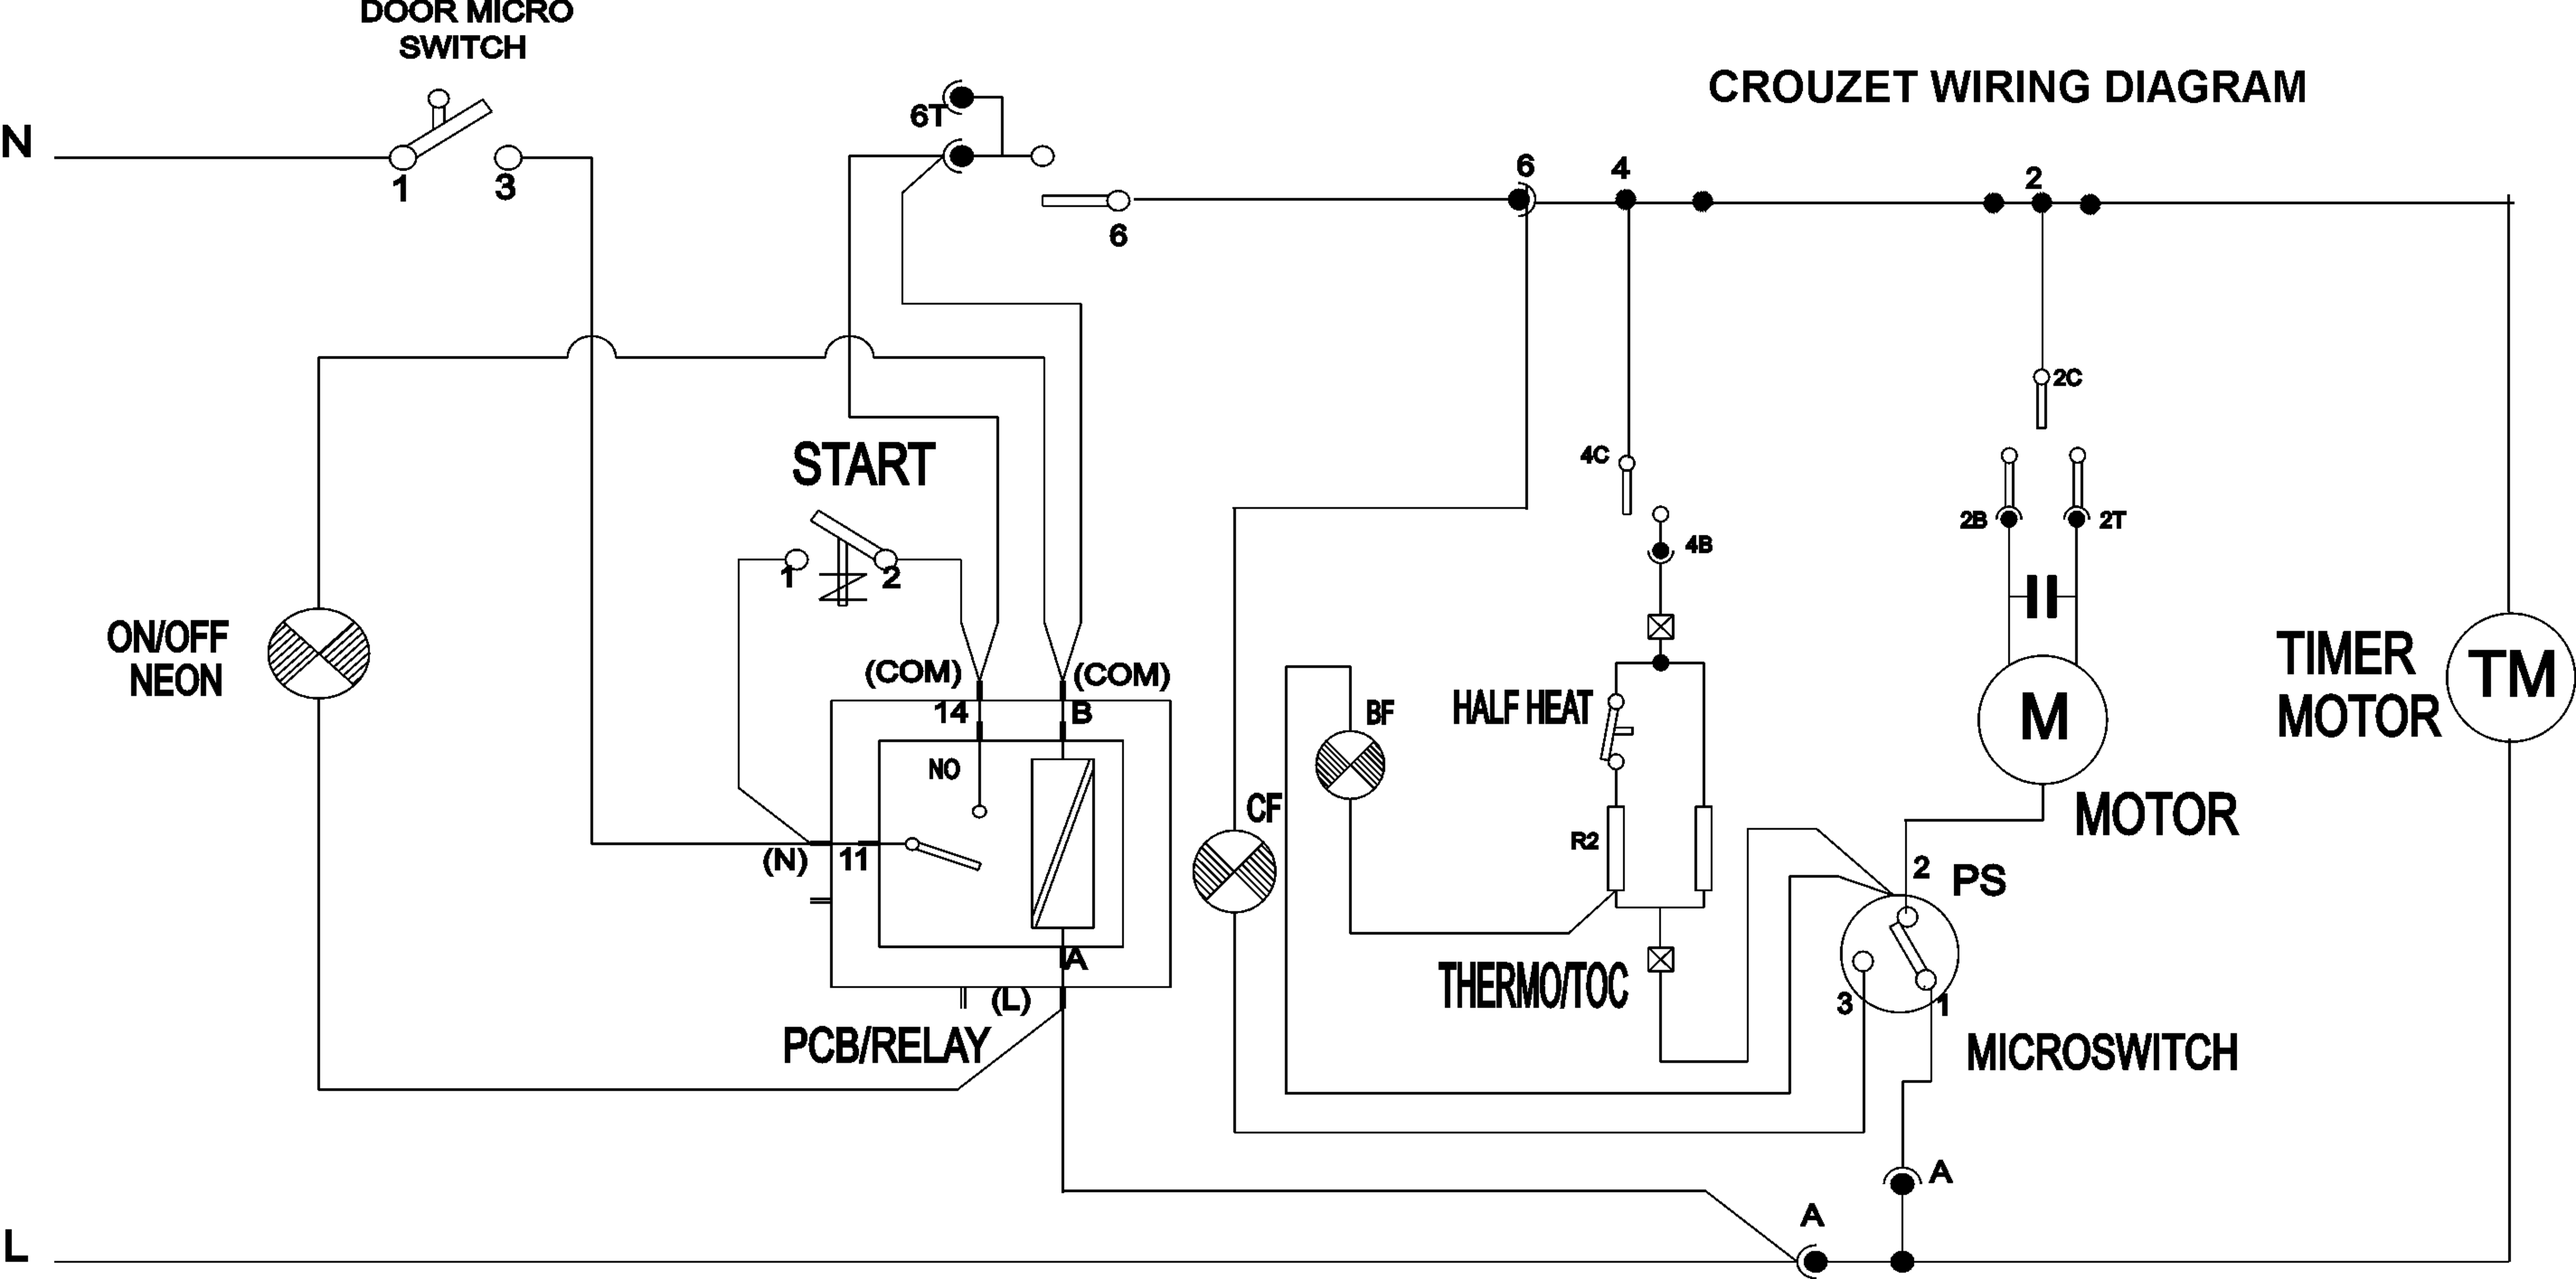
CROUZET WIRING DIAGRAM
DOOR MICRO SWITCH
N
L
1
3
6T
6
6
4
2
2C
4C
4B
2B
2T
START
1
2
ON/OFF NEON
(COM)
(COM)
14
B
NO
(N)
11
A
(L)
PCB/RELAY
CF
BF
HALF HEAT
R2
THERMO/TOC
M
MOTOR
TIMER MOTOR
TM
2
PS
3
1
MICROSWITCH
A
A

INVENSYS WIRING DIAGRAM

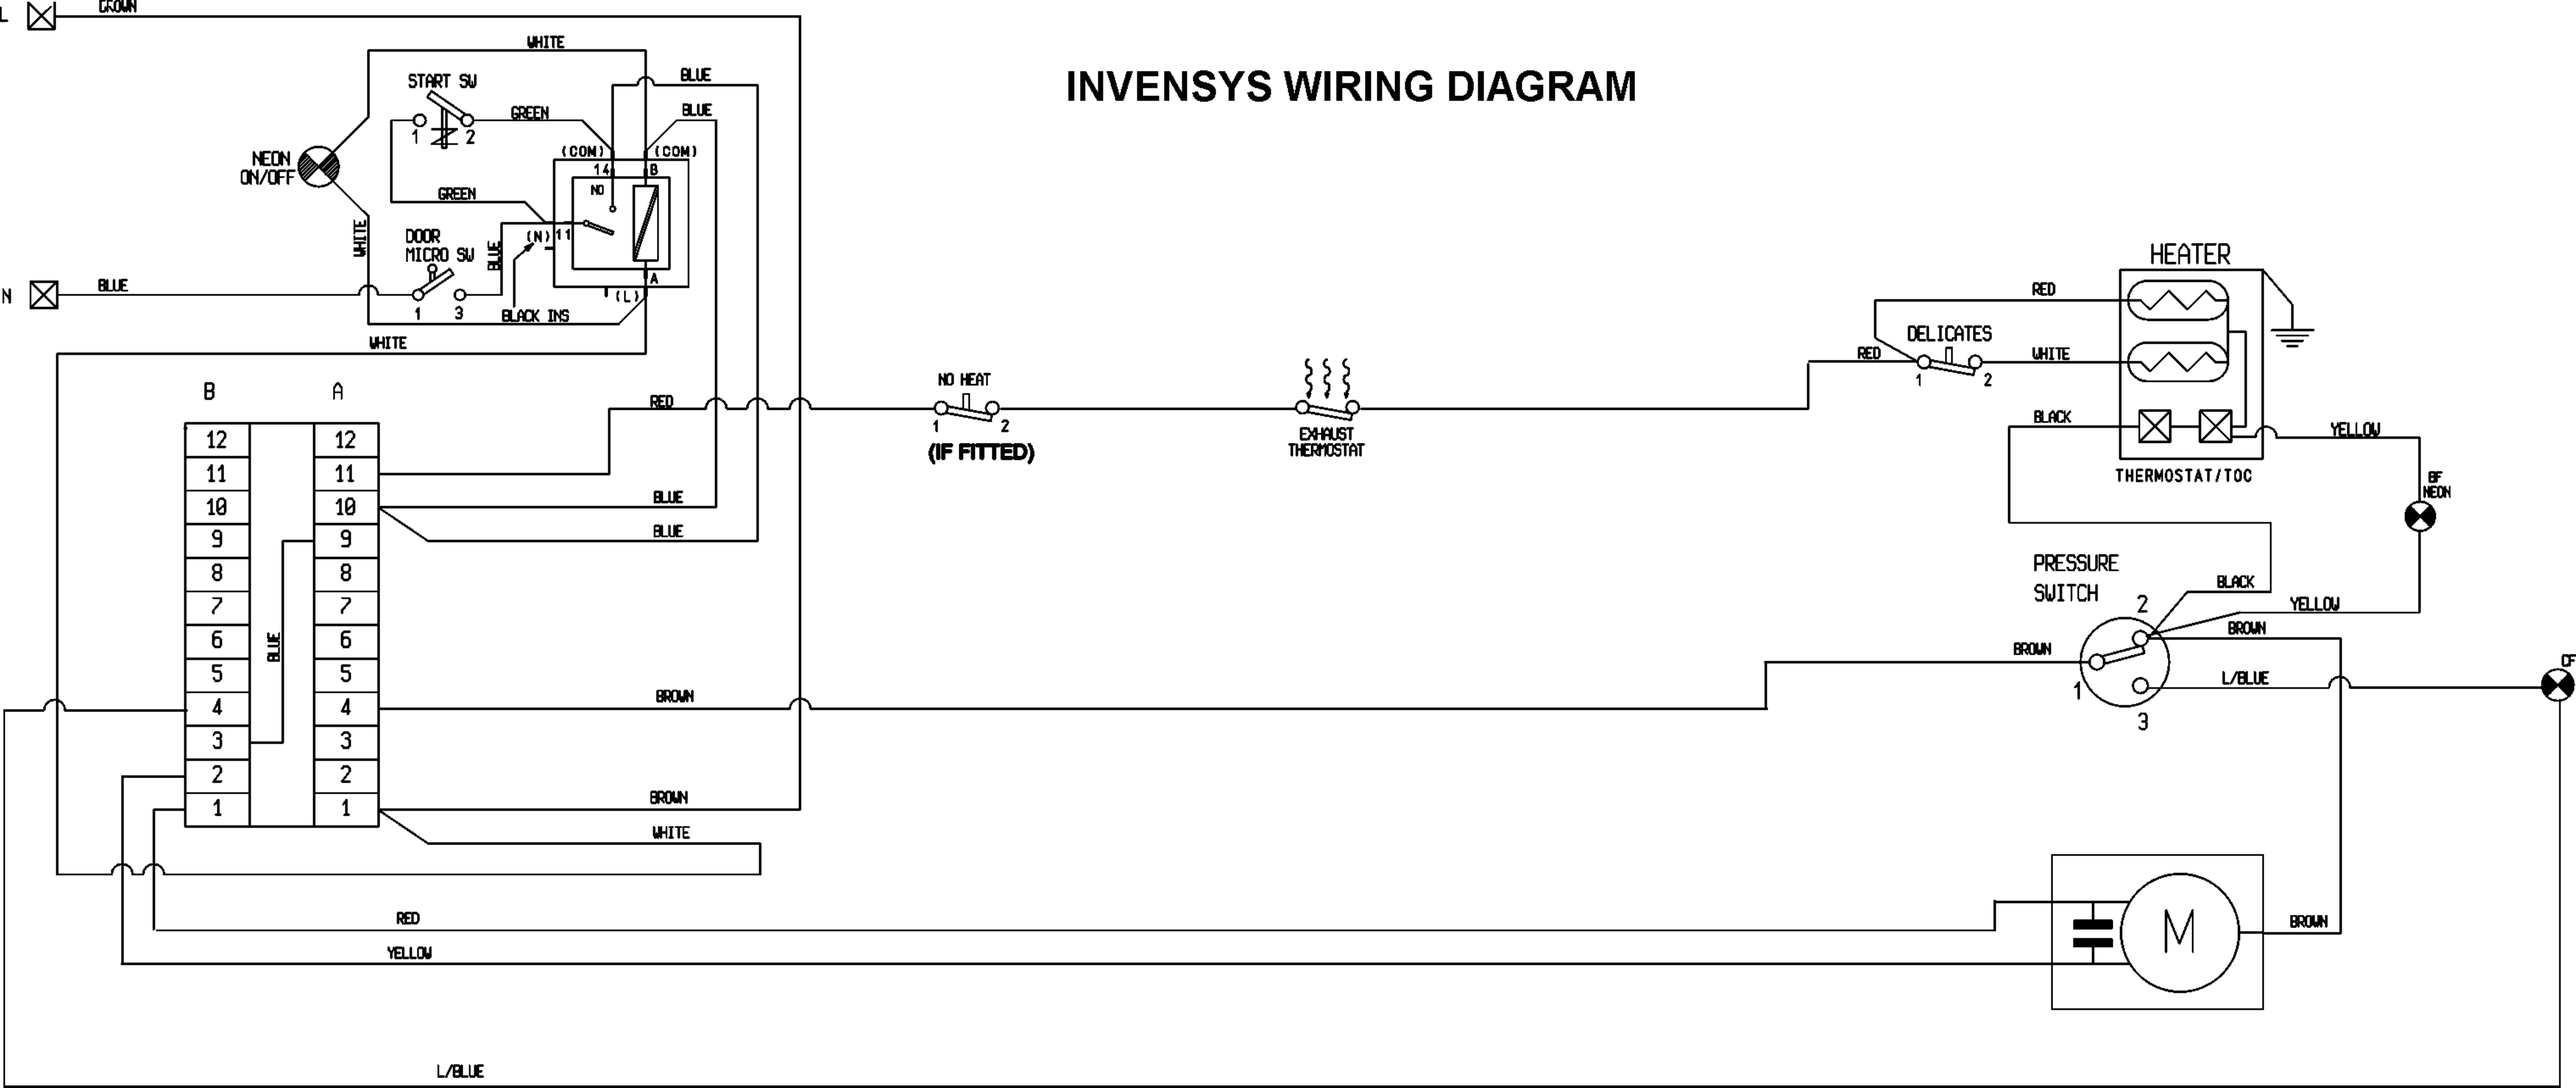

INVENSYS WIRING DIAGRAM